



## STEP BY STEP INSTRUCTIONS FOR USE



Insert glue-catcher in the rebate of the mitreForma™




Place mitreForma™ in position using the quick-release rod, then screw until finger-tight




Place the fascia in position and ensure it is correctly aligned




Use the retaining arms to ensure fascia is held firmly against the back guide

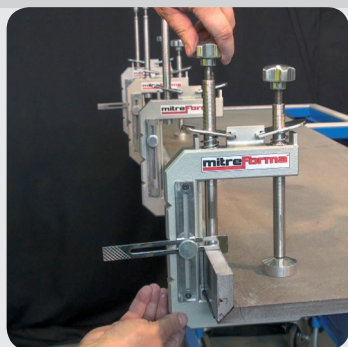

Use the fascia clamping rods to press the fascia into place. **DO NOT** over-tighten!

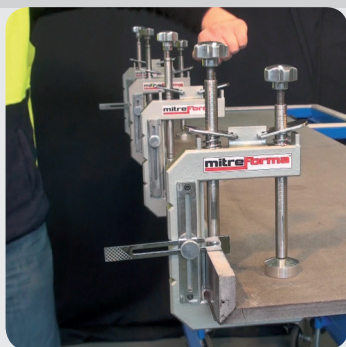


Check that all main clamping rods are firm and all the seams are correctly aligned

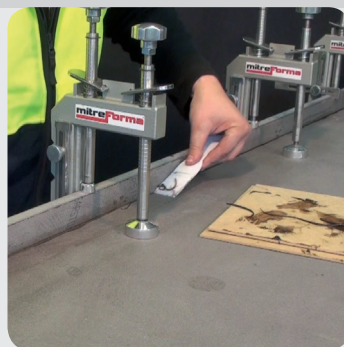

Excess glue can be easily removed once it is sufficiently firm



Once the glue has set, release the retaining arms

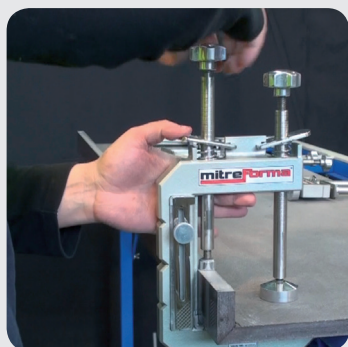

Unscrew the fascia clamping rods, then press the quick-release tab and retract the rod



Unscrew the main clamping rod, then press the quick-release tab to lower and remove the mitreForma™

### Tips:

- Glue can be applied to the stone before the mitreForma is placed in position
- A dry-run can be useful for complicated jobs to ensure all pieces align correctly
- **DO NOT** press quick-release tabs while clamping rods are under pressure
- **DO NOT** over-tighten either of the clamping rods
- Glue-catcher should be replaced after each use

**Integra**  
**Adhesives**

Integra Adhesives Inc.  
4-33759 Morey Avenue  
Abbotsford BC Canada  
V2S 2W5

Integra Adhesives USA  
Box 970 115 First Street  
Sumas WA USA  
98295

Phone 1.604.850.1321 Fax 1.604.850.1354 Toll Free 1.888.862.6665  
contact@integra-adhesives.com | <http://www.integra-adhesives.com>